


# Brakes

---

## Adjustment

### UNDER FRONT FENDER

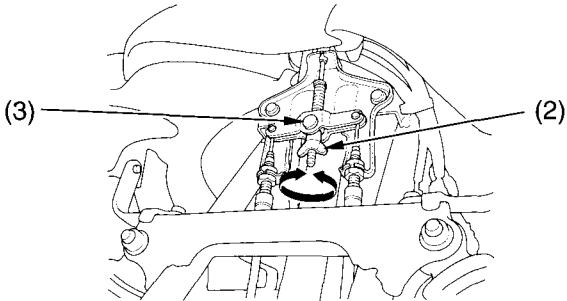

- (2) front brake lever adjusting nut
- (3) brake arm pin

Turn the front brake lever adjusting nut (2), located under the front fender. Make sure the cutout on the adjusting nut is properly seated on the brake arm pin (3).