

# Engine Oil

---

3. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 160 ).

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

### *Add Engine Oil:*

1. Check that the drain plug sealing washer is in good condition. If necessary, replace the sealing washer.
2. Reinstall the oil drain plug and tighten it to the specified torque:  
24 N·m (2.4 kgf·m , 17 lbf·ft)
3. Fill the crankcase with the recommended grade oil approximately:  
0.7 ℓ (0.7 US qt , 0.6 Imp qt)
4. Reinstall the oil filler cap/dipstick.
5. Start the engine and let it idle for 3 – 5 minutes.
6. Stop the engine and check the oil level. Make sure the oil is between the upper and lower level marks on the oil filler cap/dipstick. If necessary, add more oil but do not overfill.
7. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.