

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL	REGULAR		Refer to page
			MAINT.	MAINT. INTERVAL		
			km	1000	2000	
			mi	600	1200	
MONTH	1	6	12			
NOTE	HOURS	20	100	200		
	DRIVE CHAIN	NOTE 1, NOTE 2	I, L	(I, L: EVERY 500 km (300 mi) or 50 operating hours)		144
	DRIVE CHAIN SLIDER			I	I	146
*	BRAKE SHOES WEAR	NOTE 1			I	135
	BRAKE SYSTEM		I	I	I	129
	GUARDS			I	I	143
*	CLUTCH SYSTEM		I	I	I	121
*	SUSPENSION			I	I	—
*	SPARK ARRESTER			C	C	128
*	NUTS, BOLTS, FASTENERS		I		I	—
**	WHEELS/TYRES		I	I	I	—
**	TIE-ROD AND JOINT BOOTS		I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS				I	—
**	STEERING SYSTEM				I	—

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.