


If a Fuse Blows

Main Fuse Access

UNDER SEAT

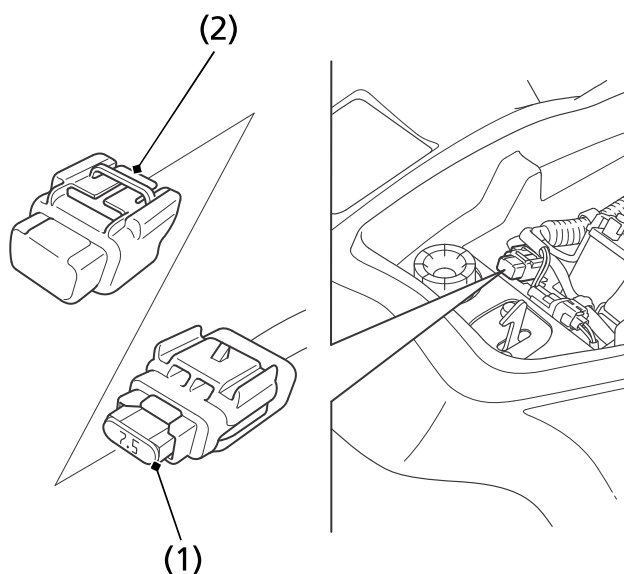

(1) fuse

(2) fuse case cover

1. To prevent an accidental short circuit, turn the ignition switch OFF (O) before checking or replacing the fuses.
2. To access the fuse (1), remove the seat (page 105).
3. Remove the fuse case cover (2).