

ITEM	FREQUENCY	WHICH EVER COMES FIRST ↓ →	ODOMETER READING [NOTE (3)]							PAGE	
			EVERY	1,000 km (600 mi)	6,400 km (4,000 mi)	12,800 km (8,000 mi)	19,200 km (12,000 mi)	25,600 km (16,000 mi)	32,000 km (20,000 mi)		38,400 km (24,000 mi)
				I, L EVERY 1,000 km (600 mi)	I	I	I	I	I		I
DRIVE CHAIN			I, L EVERY 1,000 km (600 mi)							136	
BATTERY	MONTH		I	I	I	I	I	I	I	164	
BRAKE FLUID	MONTH I 2 YEARS *R		I	I	I	*R	I	I	*R	144	
BRAKE PAD WEAR				I	I	I	I	I	I	146	
BRAKE SYSTEM			I		I		I		I	144	
* BRAKE LIGHT SWITCH			I		I		I		I	180	
* HEADLIGHT AIM			I		I		I		I		
CLUTCH FLUID	MONTH I 2 YEARS *R		I	I	I	*R	I	I	*R	132	
CLUTCH SYSTEM			I		I		I		I	132	
SIDE STAND					I		I		I	148	
* SUSPENSION			I		I		I		I	148	
* NUTS, BOLTS, FASTENERS			I		I		I		I		
** WHEELS			I		I		I		I		
** STEERING HEAD BEARING			I		I		I		I		

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

NOTES: (1) Service more frequently when riding in dusty areas.

(2) Service more frequently when riding in rain, or at fully throttle.

(3) For higher odometer reading, repeat at the frequency interval established here.