
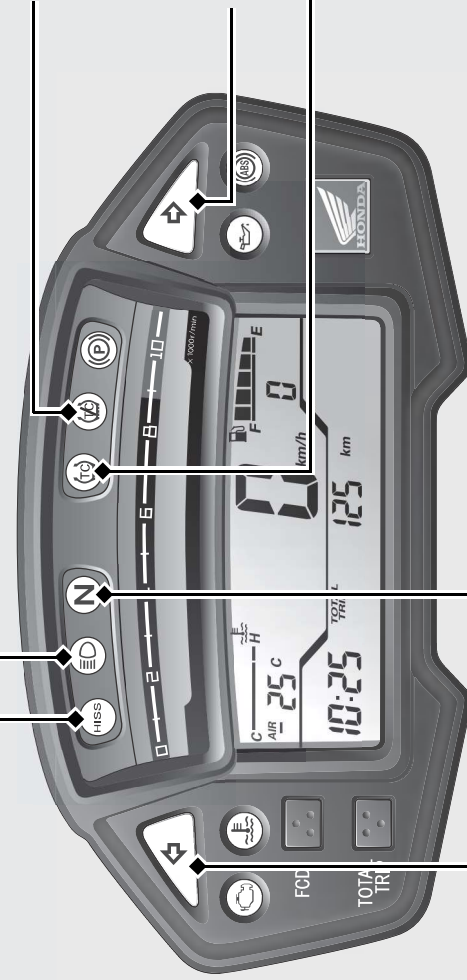


HISS indicator  **P.113**

- Comes on briefly when the ignition switch is turned on. Goes off if the ignition key has the correct coding.
- Flashes every 2 seconds for 24 hours when the ignition switch is turned off.

 **High beam indicator**



 **TCS (Traction Control System) OFF indicator**

Comes on when the TCS is turned off.

 **Right turn signal indicator**

 **TCS (Traction Control System) indicator**

- Comes on when the ignition switch is turned on. Goes off when your speed reaches approximately 10 km/h (6 mph) to indicate TCS is ready to work.

 **Neutral indicator**

Comes on when the transmission is in Neutral.

 **Left turn signal indicator**

- Blinks when TCS is operating.
- If it comes on while riding:** 