

Installation

Install the parts in the reverse order of removal.

Right Engine Heat Guard & Right Under Cowl

The right engine heat guard must be opened to service the coolant reserve tank or to check the engine number.

(VFR1200X)

The right under cowl must be removed to service the engine oil filter.

(VFR1200XD)

The right under cowl must be removed to service the engine oil filter and the clutch oil filter.

Removal

1. Remove the clip. ➔ P. 64
2. Remove the prongs from the grommets.
3. Remove the right engine heat guard.

