


Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 56

■ Fuse Box Fuses

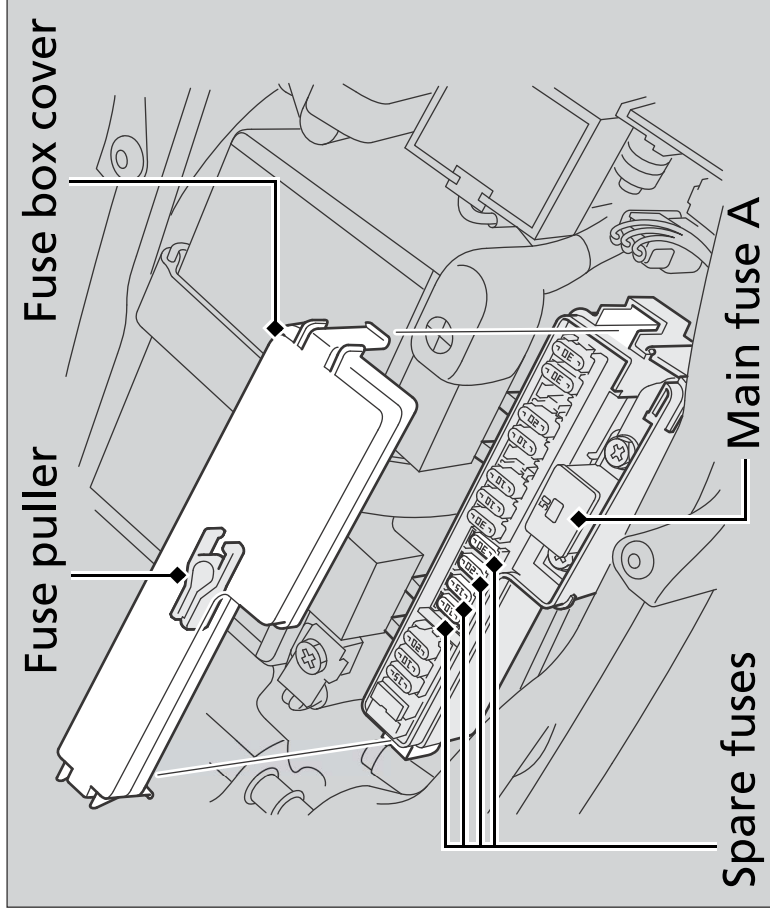

1. Remove the seat. ► P. 63
2. Remove the fuse box cover.
3. Pull the main fuse A and other fuses out one by one with the fuse puller in the fuse box cover and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the seat.