

<b>Ref. No.</b>	<b>Description</b>	<b>Function</b>
10	Side stand indicator (amber)	Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut-off system (page 71) is activated.
11	Coolant temperature gauge	Shows coolant temperature (see page 13).
12	Fuel gauge	Shows approximate fuel supply available (see page 14).
13	Tripmeter reset knob	Resets tripmeter to zero (0) by pushing the knob
14	Digital clock	Shows hour and minute (see page 15).