

MAJOR COMPONENTS (Information you need to operate this motorcycle)

▲ WARNING

- * If the Pre-ride Inspection (page 43) is not performed, severe personal injury or vehicle damage may result.

SUSPENSION

Rear Suspension

The rear suspension can provide the desired ride under various rider/passenger weight and riding conditions through adjustments of the spring preload with the adjuster (1).

The spring preload adjuster is located behind the left side cover.

Spring preload adjustment:


To adjust preload, attach the 8 x 12 mm Spanner (4) (see page 39) to the spring preload adjuster (1) as shown.

To reduce preload—turn the adjust knob in counterclockwise direction (2) to LOW from the standard (STD) position.

To increase preload—turn the adjust knob in clockwise direction (3) to HIGH.

NOTE:

- * Do not leave the mark (5) between detents.

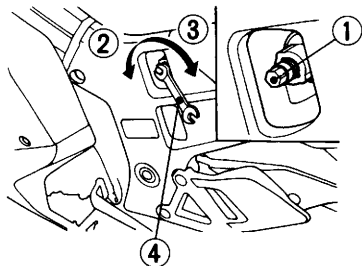

- | | |
|--------------------|-----------------------|
| (1) Adjuster | (3) Increase preload |
| (2) Reduce preload | (4) 8 x 12 mm Spanner |