


Clutch Lever:

The distance between the tip of the clutch lever (1) and the grip can be adjusted by turning the adjuster (2).

CAUTION:

* **Align the arrow (3) on the clutch lever with the index mark (4) on the adjuster.**

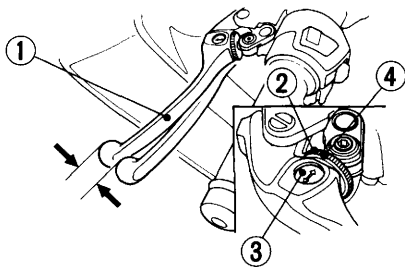

(1) Clutch lever

(2) Adjuster

(3) Arrow

(4) Index mark