


## Inspection

The reserve tank is behind the middle fairing. Check the coolant level in the reserve tank (1) while the engine is at the normal operating temperature with the motorcycle in an upright position. If the coolant is low, remove the right inner pannel (5) by removing a screw and releasing the tab (6). Remove the reserve tank cap (4) and add coolant mixture until it reaches the UPPER level mark (2). Do not remove the radiator cap.

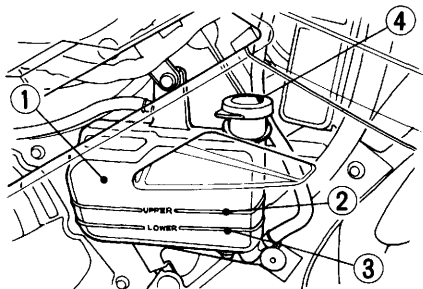


- (1) Reserve tank      (3) LOWER level mark  
(2) UPPER level mark      (4) Reserve tank cap

## ⚠ WARNING

- \* Do not remove the radiator cap when the engine is hot. The coolant is under pressure and could scald you.
- \* Keep hands and clothing away from the cooling fan, as it starts automatically.

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your authorized Honda dealer for repair.

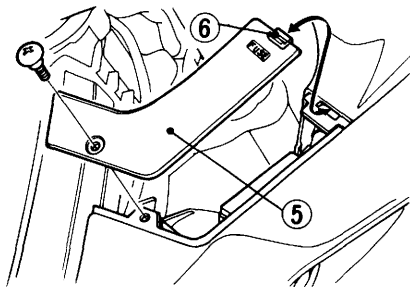

- (5) Right inner panel      (6) Tab