


Tripmeter

The tripmeter shows mileage per trip.

There are two tripmeters, tripmeter A (3) and tripmeter B (4). Switch between the odometer, tripmeter A and tripmeter B by pressing the RESET button (5) repeatedly.

To reset the tripmeter, push and hold the RESET button with the display in the tripmeter A or tripmeter B mode.

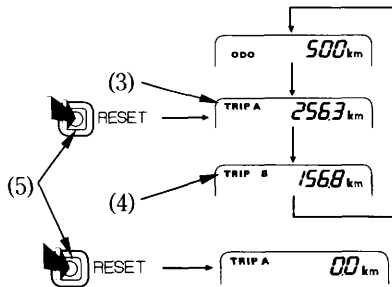


Speed and Mileage Unit Change (E type only)

The speedometer displays both “km/h” and “mph”.

The odometer/tripmeter displays both “km” and “mile”.

Push and hold the SELECT button (6) for more than 2 seconds to select “km/h”/“km” or “mph”/“mile”.

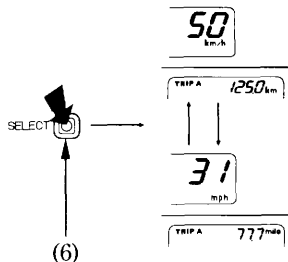

- (3) Tripmeter A
(4) Tripmeter B

- (5) RESET button
(6) SELECT button