

## MAJOR COMPONENTS

### (Information you need to operate this motorcycle)

#### SUSPENSION

##### Front Suspension

###### Spring Preload:

Adjust the spring preload by turning the spring preload adjuster (1) with the No.2 screwdriver provided in the tool kit (page 91 ).

Make sure that both fork legs are adjusted to the same position.

To reduce (SOFT) :

Turn the adjuster counterclockwise toward SOFT for a light load and smooth road condition.


To increase (HARD) :

Turn the adjuster clockwise toward HARD for a firmer ride and rough road condition.

###### Standard Position:

To return to the standard position, turn the adjusters until the second groove from the top aligns with the top surface of the fork caps.

###### Standard position

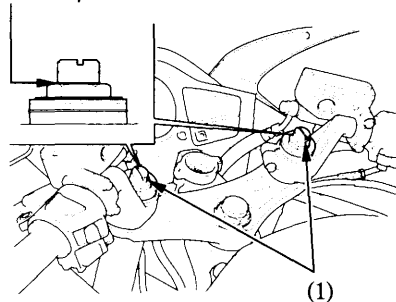

(1) Spring preload adjuster