


## FUEL TANK MAINTENANCE POSITION

The front of the fuel tank can be tilted up for maintenance.

The fuel tank does not require draining.

### To raise:

1. Place the motorcycle on its center stand on a firm, level surface with the transmission in neutral and the ignition switch OFF. Check that the fuel fill cap is closed.
2. Remove the seat (page 58 ).
3. Remove the bolts (1) with washers (2) and the collars (3).

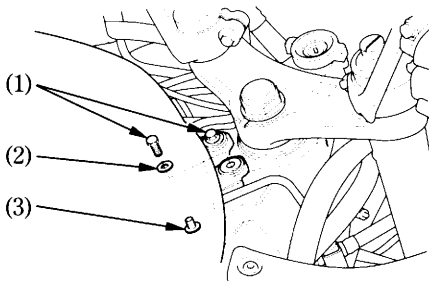

- (1) Bolts
- (2) Washers
- (3) Collars