


## CLIP

### Removal:

- ① Press down on the center pin to release the lock.
- ② Pull out the clip from the hole.

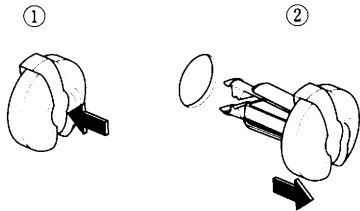

### Installation:

- ① Slightly open the retaining pawls and then push them out.
- ② Insert the clip into the hole.
- ③ Lightly press down on the center pin to lock the clip.

