


## WHEEL REMOVAL

Refer to the Safety Precautions on page 87 .


### Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Cover both sides of the front wheel with a protective tape (1) or equivalent.

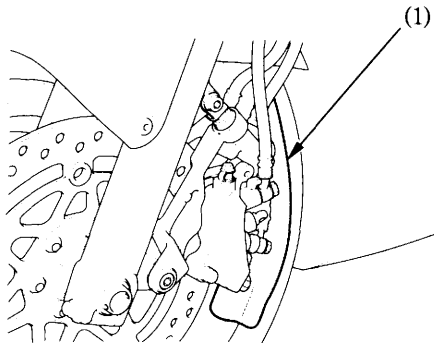

(1) Protective tape

3. Remove the socket bolt A (2) and socket bolt B (3).

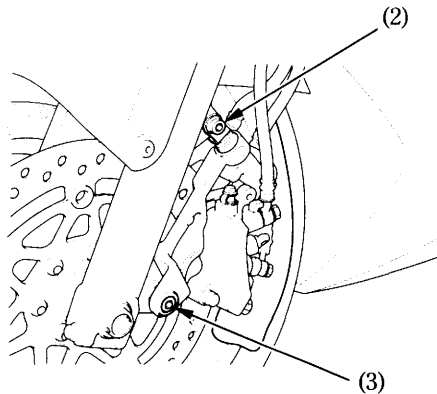

(2) Socket bolt A

(3) Socket bolt B