



6. Loosen the right and left axle pinch bolts (7), and remove the front axle bolt (8).
7. Withdraw the front axle shaft (9) and remove the front wheel.

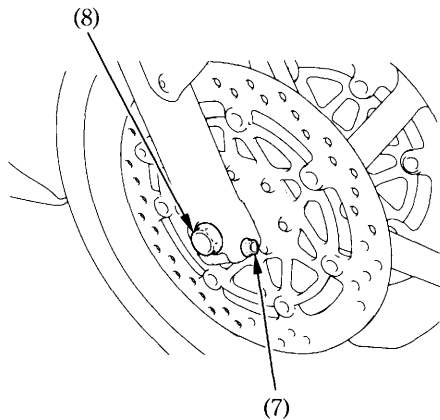

(7) Axle pinch bolts

(8) Front axle bolt

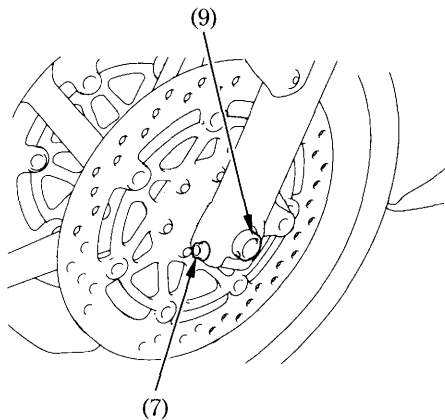

(9) Front axle shaft