

(Ref.No.) Description	Function	
(5) PGM-FI malfunction indicator lamp (MIL) (red)	<p>Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at ○ (RUN).</p> <p>If it comes on at any other time, reduce speed and take the motorcycle to your Honda dealer as soon as possible.</p>	
(6) Right turn signal indicator (green)	Flashes when the right turn signal operates.	
(7) Right multi-function display	The display includes the following functions; This display shows the initial display (page 18).	
	Tripmeter A and B	Shows mileage per trip (page 24).
	Odometer	Shows accumulated mileage (page 23).
	Fuel gauge	Shows approximate fuel supply available (page 20).
Digital clock	Shows hour and minute (page 25).	