

(Ref.No.) Description	Function						
(11) SELECT button	<p>Except E type: This button is used to select the coolant or air temperature meter or to adjust the time.</p> <p>For E type: This button is used to select the coolant or air temperature meter or to adjust the time or to change the speed and mileage units for the speedometer/odometer/tripmeter.</p>						
(12) Left multi-function display	<p>The display includes the following functions; This display shows the initial display (page 18).</p> <table border="1" data-bbox="168 567 1315 813"> <tbody> <tr> <td data-bbox="168 567 539 640">Speedometer</td> <td data-bbox="539 567 1315 640">Shows riding speed (page 23).</td> </tr> <tr> <td data-bbox="168 640 539 743">Coolant temperature meter</td> <td data-bbox="539 640 1315 743">Shows coolant temperature (page 21).</td> </tr> <tr> <td data-bbox="168 743 539 813">Air temperature meter</td> <td data-bbox="539 743 1315 813">Shows air temperature (page 22).</td> </tr> </tbody> </table>	Speedometer	Shows riding speed (page 23).	Coolant temperature meter	Shows coolant temperature (page 21).	Air temperature meter	Shows air temperature (page 22).
Speedometer	Shows riding speed (page 23).						
Coolant temperature meter	Shows coolant temperature (page 21).						
Air temperature meter	Shows air temperature (page 22).						