


## REAR SEAT COVER

See your Honda dealer for installation/  
removal of the rear seat cover.

### Installation:

1. Remove the seat (page 58).
2. Remove the caps (1), bolts (2) and washers (3).
3. Remove the rear grab rails (4).
4. Install the grab rail covers (5).

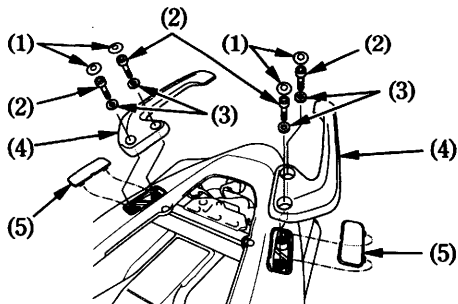

- |             |                      |
|-------------|----------------------|
| (1) Caps    | (4) Grab rails       |
| (2) Bolts   | (5) Grab rail covers |
| (3) Washers |                      |