


## **INNER COWL**

### **Removal:**

1. Remove the front cowl (page 64 ).
2. Remove the clips (1).
3. Remove the inner cowl (2).

### **Installation:**

- Installation can be done in the reverse order of removal.

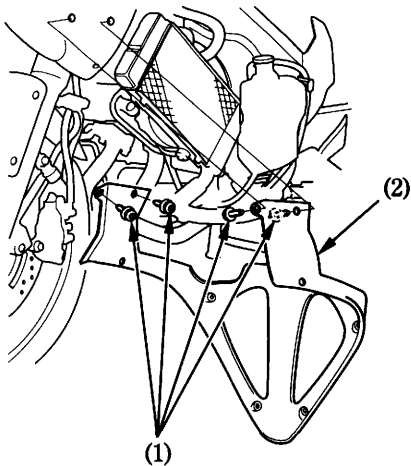

- (1) Clips  
(2) Inner cowl