

## **INNER PANEL**


The right and left inner panels can be removed in the same manner.

### Removal:

1. Remove the bolts (1).
2. Remove the clip (2).
3. Remove the inner panel (3).

### Installation:

- Installation can be done in the reverse order of removal.

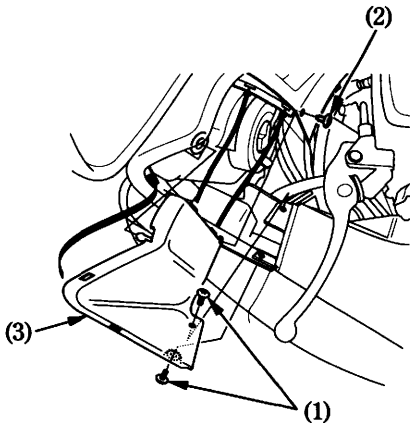

(1) Bolts  
(2) Clip

(3) Inner panel