
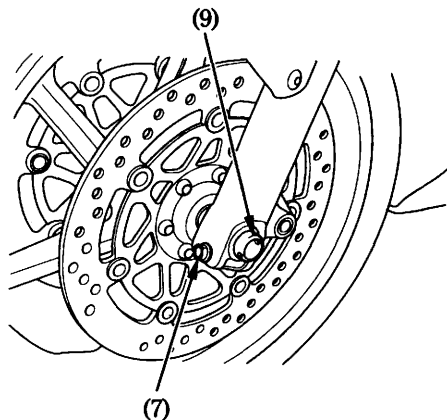


- Loosen the right and left axle pinch bolts (7), and remove the front axle bolt (8).
- Withdraw the front axle shaft (9) and remove the front wheel.

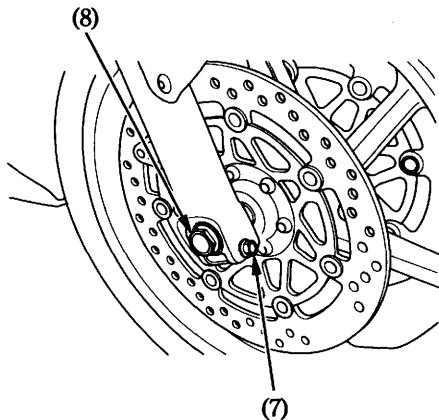

(7) Axle pinch bolts

(8) Front axle bolt

(9) Front axle shaft