

## Air Temperature Meter

Air temperature meter (1) shows air temperature digitally.


If the display is coolant temperature, push the TEMP button (2).

### Temperature display

Below $-10^{\circ}\text{C}$	“- -” is displayed.
Between $-9^{\circ}\text{C}$ and $50^{\circ}\text{C}$	Actual air temperature is indicated.
Above $50^{\circ}\text{C}$	The display will remain “ $50^{\circ}\text{C}$ ”

### NOTE:

\* The temperature sensor is located in the upper cowl. Therefore, the temperature reading can be affected by heat reflection from the road surface, engine heat, and the exhaust from the surrounding traffic. This can cause the temperature reading not to be correct when your speed is under 30 km/h (19 mph).

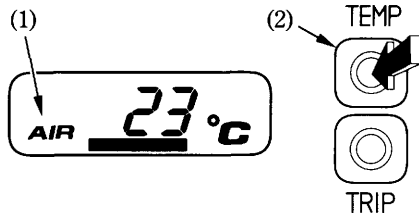

- (1) Air temperature meter
- (2) TEMP button