


## FRONT COWL

### Removal:

1. Remove the bolts A (1).
2. Remove the clips (2).
3. Remove the bolts B (3).

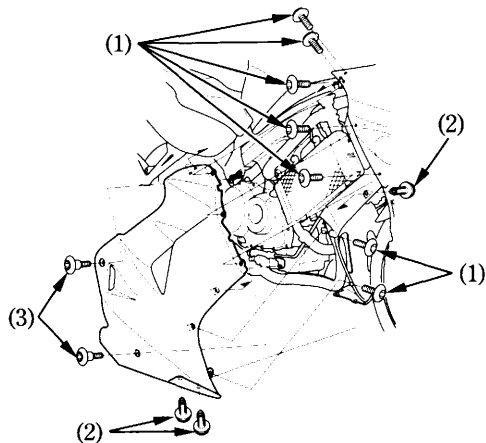


(1) Bolts A

(2) Clips

54

### Installation:

- Installation can be done in the reverse order of removal.

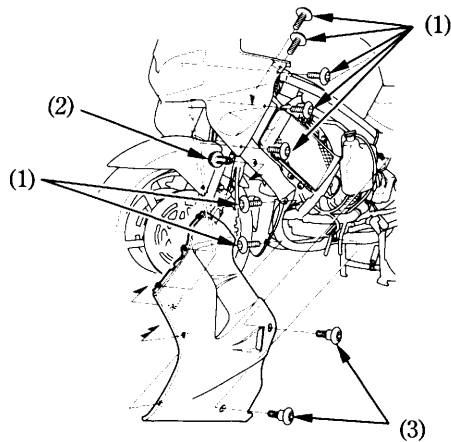

(3) Bolts B