


## **INNER COWL**

### Removal:

1. Remove the front cowl (page 50).
2. Remove the clips (1) (page 52).

### Installation:

- Installation can be done in the reverse order of removal.

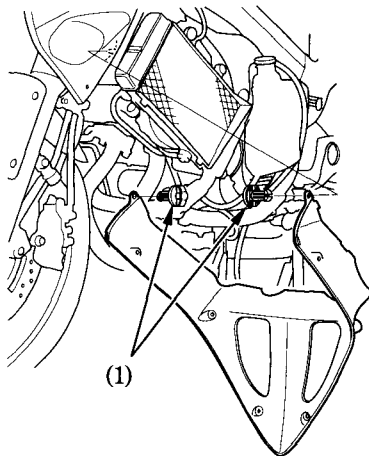

(1) Clips