



## Maintenance Schedule

Items	Frequency	Pre-ride Check P.43	Odometer Reading *1						Annual Check	Regular Replace	Refer to page
			× 1,000 km	1	12	24	36	48			
			× 1,000 mi	0.6	8	16	24	32			
Fuel Line				I	I	I	I	I		-	
Fuel Level		I								-	
Throttle Operation		I		I	I	I	I	I		74	
Air Cleaner *2					R		R			-	
Spark Plug					I		R			-	
Valve Clearance					I		I			-	
Engine Oil		I		R	R	R	R	R	R	61	
Engine Oil Filter				R	R	R	R	R	R	63	
Engine Idle Speed				I	I	I	I	I		78	
Radiator Coolant *3		I		I	I	I	I	I	3 Years	65	
Cooling System				I	I	I	I	I		-	
Secondary Air Supply System				I	I	I	I	I		-	

Maintenance

### Maintenance Level

: Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Shop Manual.

: Technical. In the interest of safety, have your motorcycle serviced by your dealer.

### Maintenance Legend

**I**: Inspect (clean, adjust, lubricate, or replace, if necessary)

**L**: Lubricate

**R**: Replace

continued 41