

Brakes/Clutch


Checking Brake Fluid

1. Place your motorcycle in an upright position on a firm, level surface.
2. **Front** Check that the brake fluid reservoir cap is horizontal and that the fluid level is above the lower level mark.
3. **Rear** Remove the seat. ➤P.54
4. **Rear** Check that the brake fluid reservoir is horizontal and that the level is between the lower level and upper level marks.

If the brake fluid level in either reservoir is below the lower level mark or the brake lever and pedal freeplay becomes excessive, inspect the brake pads for wear. If the brake pads are not worn, you most likely have a leak. Have your motorcycle inspected by your dealer.

Front

Front brake fluid reservoir

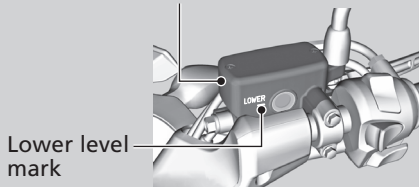

Rear

Rear brake fluid reservoir

Upper level mark

Lower level mark

