



## Other Adjustments

### Adjusting the Clutch and Brake Levers

You can adjust the distance between the tip of the clutch and brake lever.

#### Adjustment method

Turn the adjuster until the numbers aligns with the index mark while pushing the lever

forward in the desired position.  
After adjustment, check that the levers operate correctly before riding.

#### NOTICE

- Do not turn the adjuster beyond its natural limit.

