

RIGHT SIDE COVER


The right side cover must be removed to inspect the fuses.

Removal:

- Pull the right side cover (1) out until the three tabs (2).

Installation:

- Insert the three tabs (2) into the frame grommets.

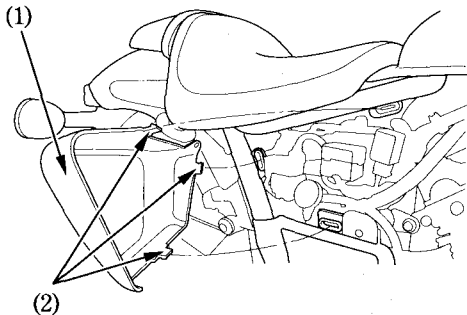

- (1) Right side cover
(2) Tabs