

Inspection:

Check the coolant level in the reserve tank (1) when the engine is at normal operating temperature. If the level is below the UPPER mark (2), top-up with coolant. If there is no coolant in the reserve tank, check for leaks and repair as necessary.

Coolant change:

WARNING: Do not perform this operation while the engine is hot.

1. Remove the lower cowling.
2. Remove the seat, side cover and fuel tank.
3. Remove the right front side cover by removing the screw.
Remove the cap from the radiator while pressing it down by hand.

