

## Removal from Storage

1. Uncover and clean the motorcycle. Change the engine oil if more than 4 months have passed since the start of storage.
2. Check the battery electrolyte level and charge the battery as required. Install the battery.
3. Drain any excess aerosol rust-inhibiting oil from the fuel tank. Fill the fuel tank with fresh gasoline.
4. Perform all Pre-ride Inspection checks (page 24). Test ride the motorcycle at low speeds in a safe riding area away from traffic.

## NOISE EMISSION

This motorcycle complies with the Australian Design Rule (ADR 39-2-3) requirements for noise emission regulations. And the data below is written according to the requirements.

Sound Level of Stationary Test	Engine Speed at Maximum Power
92 dB (A)	12,500 rpm