


Measure the clearance (7) between each surface of the left brake disc (8) and the left caliper holder (9) with a 0.7 mm (0.028 in) feeler gauge (See sketch).

If the feeler gauge (10) can go through the clearance easily, tighten the left axle holder nuts to 22 N·m (2.2 kg-m, 16 ft-lb) torque.

▲ WARNING

* *If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.*

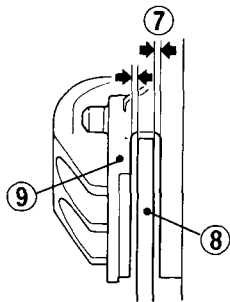

(7) Clearance

(9) Left caliper holder

(8) Left brake disc


If the feeler gauge cannot be inserted easily, pull the left fork outward or push inward until the gauge can be inserted and tighten the holder nuts with the gauge inserted. After retightening, remove the gauge.

After installing the wheel, apply the brakes several times, then recheck both discs for caliper holder to discs clearance.

Do not operate the motorcycle without adequate clearance.

▲ WARNING

* *Failure to provide adequate disc to caliper holder clearance may damage the brake disc and impair braking efficiency.*

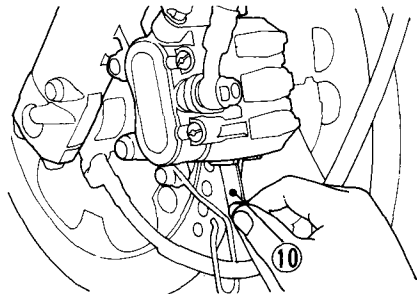

(10) Feeler gauge