

NOTE:

- * Some pressure will be lost when removing the gauge from the valve. Determine the amount of loss and compensate accordingly.
4. Add air to the recommended pressure.

CAUTION:

- * **Do not exceed 300 kPa (3.0 kg/cm², 42 psi) or the air pressure gauge may be damaged.**

NOTE:


- * Do not exceed the recommended air pressure or the ride will be harsh and uncomfortable.

Rear Suspension

Spring preload:

The rear suspension can provide the desired ride under various rider/passenger weight and riding conditions through adjustments of the spring preload adjuster (1).

The spring preload adjuster is located behind the left side cover. Remove the left side cover by turning the screw (2) counterclockwise and pulling the cover (3) out carefully while hold the rear cowl (4).

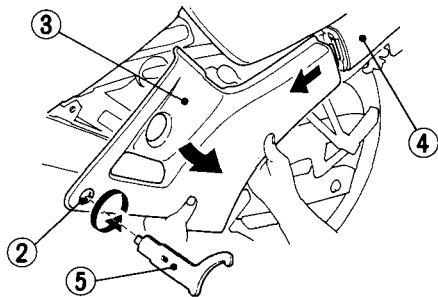

- (2) Screw
(3) Left side cover

- (4) Rear cowl
(5) Pin spanner