


Measure the clearance (7) between each surface of the left brake disc (8) and the left caliper holder (9) with a 0.7 mm (0.028 in) feeler gauge (10) (see sketch). If the gauge inserts easily, tighten the left axle holder nuts (5) to the specified torque.

Axle holder nut torque:

22 N·m (2.2 kg·m, 16 ft·lb)

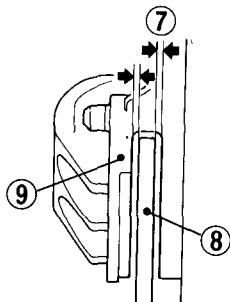


(7) Clearance

(9) Left caliper holder

(8) Left brake disc

▲ WARNING

- * If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.

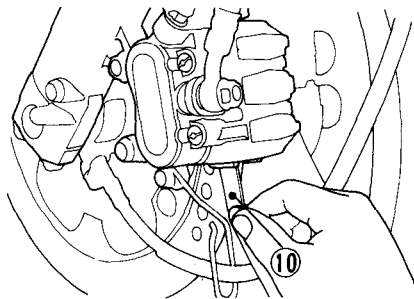

(10) Feeler gauge