

Ref. No.	Description	Function
8	Neutral indicator (green)	Lights when the transmission is in neutral.
9	Turn signal indicator (amber)	Flashes when either turn signal is operated.
10	High beam indicator (blue)	Lights when the headlight is on high beam.