

Installation Notes:

To install the rear wheel, reverse the removal procedure.

Tighten the axle nut to specified torque.

Axle nut torque:

90 N·m (9.0 kg-m, 65 lb-ft)

After installing the wheel, apply the brakes several times, and check for free wheel rotation when released.

WARNING

- * **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**