

# MAJOR COMPONENTS (Information you need to operate this motorcycle)

## ▲ WARNING

\* If the Pre-ride Inspection (page 34) is not performed, severe personal injury or vehicle damage may result.

## SUSPENSION


### Rear Suspension

The spring preload adjuster (1) has 7 spring preload positions for different load or riding conditions.

Remove the left side cover (page 33). Use the pin spanner to adjust the rear shock. Position 1 is for light loads and smooth road conditions.

Positions 2 to 7 increase spring preload for a stiffer rear suspension and can be used when the motorcycle is more heavily loaded.

Standard position : 2

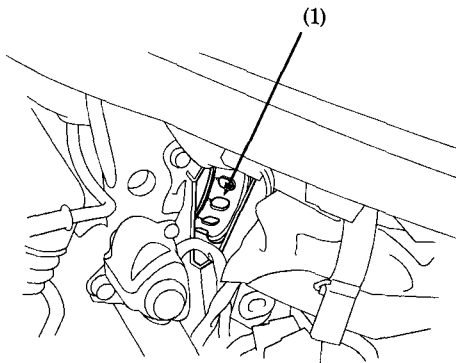

(1) Spring preload adjuster