

Inspection

The reserve tank is behind the right side cover.


Remove the right side cover (page 33).

Check the coolant level in the reserve tank (1) while the engine is at the normal operating temperature with the motorcycle in an upright position. If the coolant level is below the LOWER level mark (3), remove the right side cover (page 33) and the reserve tank cap (4). Add coolant mixture until it reaches the UPPER level mark (2). Do not remove the radiator cap.

▲WARNING

- * **Do not remove the radiator cap when the engine is hot. The coolant is under pressure and could scald you.**
- * **Keep hands and clothing away from the cooling fan, as it starts automatically.**

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your authorized Honda dealer for repair.

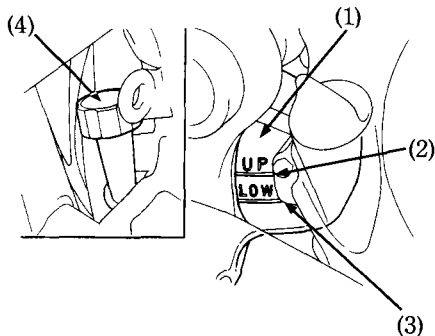

- (1) Reserve tank
(2) UPPER level mark

- (3) LOWER level mark
(4) Reserve tank cap