


ESSENTIAL INDIVIDUAL COMPONENTS


IGNITION SWITCH

The ignition switch (1) is on front of left side cover.

〈Except AR type〉

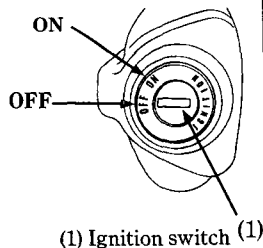

〈AR type〉

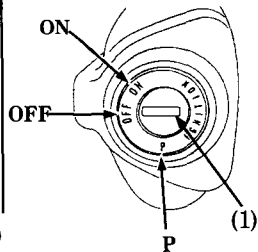

Key Position	Function	Key Removal
P (parking) (AR type only)	For parking the motorcycle near traffic. The taillight is on, but all other lights are off. The engine cannot be started.	Key can be removed
OFF	Engine and lights cannot be operated.	Key can be removed
ON	Engine and light can be operated.	Key cannot be removed