

FUSE REPLACEMENT


(Refer to the maintenance precautions on page 47).

The main fuse (1), located on the starter magnetic switch (2) behind the right side cover, is:

30A (Main fuse)

The spare main fuse (4) is located near the fuse box.

The fuse box is located behind the right side cover.

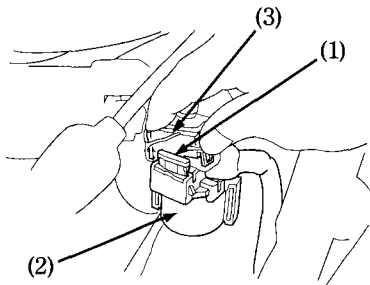


- (1) Main fuse (3) Wire coupler
(2) Starter magnetic switch

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

CAUTION:

*** Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse (1), remove the right side cover, disconnect the wire coupler (3) and remove the old fuse. Install a new fuse and reconnect the wire coupler.

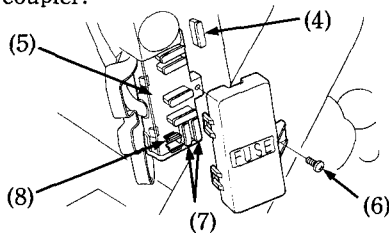

- (4) Spare main fuse (5) Fuse box (6) Screw
(7) Spare fuses (8) Fuse remover