


ESSENTIAL INDIVIDUAL COMPONENTS

IGNITION SWITCH

The ignition switch (1) is on front of left side cover.

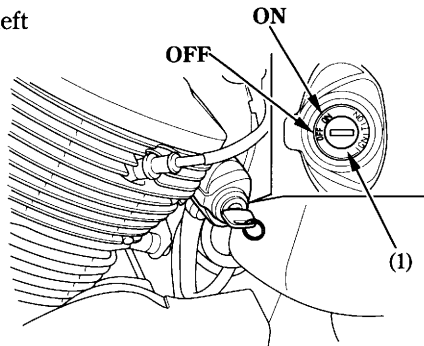

(1) Ignition switch

Key Position	Function	Key Removal
O F F	Engine and lights cannot be operated.	Key can be removed
O N	Engine and lights can be operated.	Key cannot be removed