

Controls & Features

Horn Button



The horn is used to alert other motorists. To operate, push the horn button (3).

Odometer/Tripmeter Select and Reset Button


The odometer/tripmeter display (1) has two functions, odometer and tripmeter.

The tripmeter will show mileage in two sub modes, "TRIP 1" and "TRIP 2."

Push the odometer/tripmeter select and reset button (2) to select the "ODO", "TRIP 1" or "TRIP 2" mode.

To reset the tripmeter, push and hold the odometer/tripmeter select and reset button with the display in the "TRIP 1" or "TRIP 2" mode.

FRONT

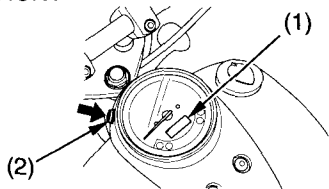

- (1) odometer/tripmeter display
- (2) odometer/tripmeter select and reset button