

Periodic Maintenance

Tires & Wheels	<p>Check the air pressure with a gauge and add air if needed (page 119).</p> <p>Examine the tread for wear (page 121).</p> <p>Look closely for nails, embedded objects, cuts, and other types of damage (page 121). Roll your motorcycle so you can inspect the entire surface.</p> <p>Check the condition of the rims and spokes.</p>
Fluids	<p>Check the levels of the engine oil (page 82), coolant (page 89), brake fluid (page 113), and final drive oil (page 95). Add the correct fluid as necessary, and investigate the cause of any low fluid level.</p>
Lights	<p>Make sure the headlight, brakelight, taillight, and turn signals are working properly.</p>
Freeplay	<p>Check the freeplay of the clutch lever (page 100), rear brake pedal (page 116), and throttle grip (page 98).</p>
Fuses	<p>Make sure you have a full supply of spare fuses.</p>
Nuts & Bolts	<p>Check the major fasteners and tighten as needed.</p>