


If a Fuse Blows

Main Fuse Access:

2. To access the main fuse (1), remove the right side cover (page 73).

RIGHT SIDE

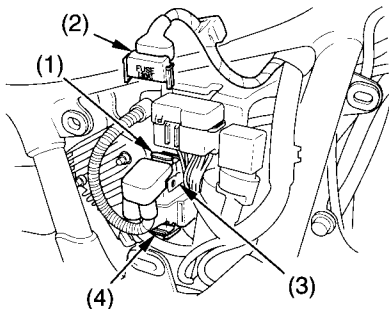

- (1) main fuse
- (2) wire connector
- (3) starter magnetic switch
- (4) spare main fuse

3. Disconnect the wire connector (2) of the starter magnetic switch (3).
4. Pull the main fuse out. If it is blown (6), install the spare main fuse (4).
5. Reconnect the wire connector.

Circuit Fuse Access:

6. Open the fuse box cover (5).
7. To check or replace a circuit fuse, pull the old fuse out of its retaining clips. Look for a burned wire inside the fuse. If the fuse is blown (6), replace it with a spare fuse (7) of the same rating.