

INSTRUMENTS AND INDICATORS

The indicators are located within the speedometer.

Their functions are described in the table on the following page.

- (1) Speedometer
- (2) Turn signal indicator
- (3) Immobilizer systemn (HISS) indicator
- (4) High beam indicator
- (5) Coolant temperature indicator
- (6) Odometer/Tripmeter display
- (7) Low oil pressure indicator
- (8) Neutral indicator
- (9) Odometer/Tripmeter select and reset button

