

## If You Have a Flat Tire

### Emergency Rear Wheel Removal/Installation

Refer to *Safety Precautions* on page 54.


We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

#### Removal

1. Park your motorcycle on a firm, level surface.
2. Raise the rear wheel off the ground by placing a support block under the engine.

3. Remove the right footpeg (1) by removing two bolts (2) and nut (3).
4. Remove the muffler bracket bolts (4) and nuts (5).

RIGHT SIDE

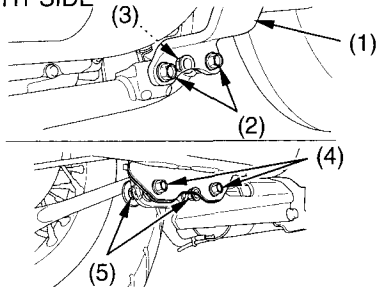

- |                   |                           |
|-------------------|---------------------------|
| (1) right footpeg | (4) muffler bracket bolts |
| (2) footpeg bolts | (5) muffler bracket nuts  |
| (3) footpeg nut   |                           |

(cont'd)