



1. To remove the spark plug from the rear cylinder, remove the seat (page 52).
2. Remove the rear bolt (1) and nut (2).

### Rear

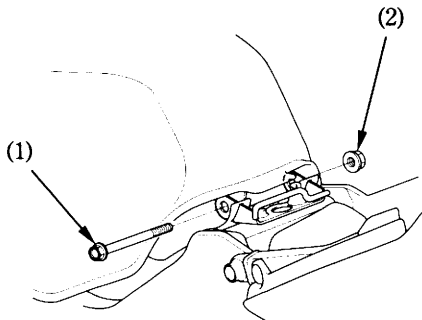

- (1) Bolt
- (2) Nut

3. With the rear of the fuel tank (3) raised, install the plug maintenance bar (4) furnished in the tool kit.

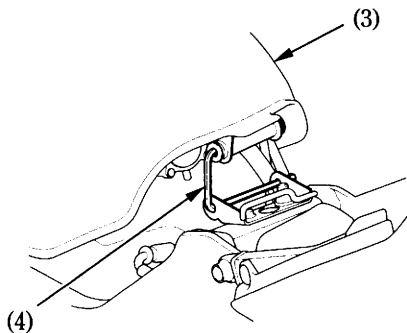

- (3) Fuel tank
- (4) Plug maintenance bar