

(Ref.No.) Description	Function
(6) Right turn signal indicator (green)	Flashes when the right turn signal operates.
(7) Low oil pressure indicator (red)	<p>Lights when the engine oil pressure is below normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>NOTICE Running the engine with insufficient oil pressure may cause serious engine damage.</p>
(8) Neutral indicator (green)	Lights when the transmission is in neutral.
(9) High beam indicator (blue)	Lights when the headlight is on high beam.